



A. FULLY WELD, GRIND SMOOTH AND POLISH.

APPROVED: 08-01-01

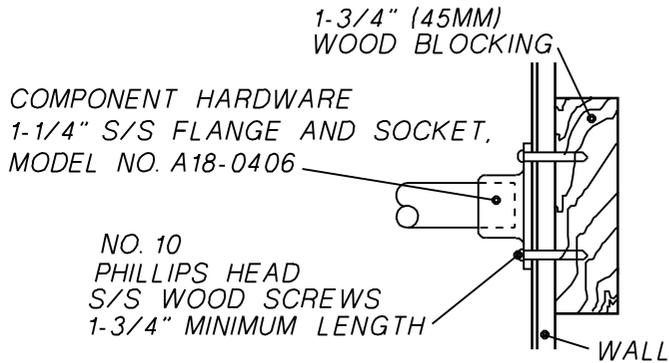


S/S FLANGE MOUNTED WITH WOOD SCREWS

A

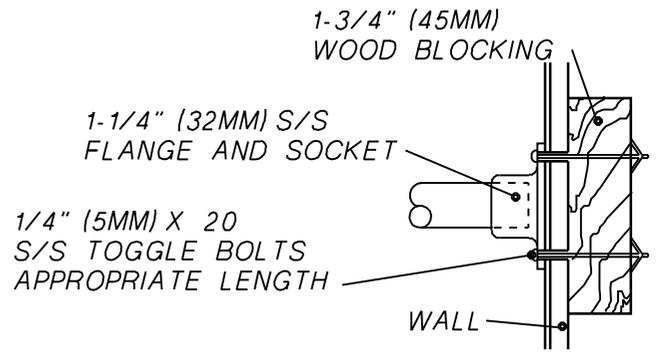


S/S FLANGE MOUNTED WITH S/S TOGGLE BOLTS

B

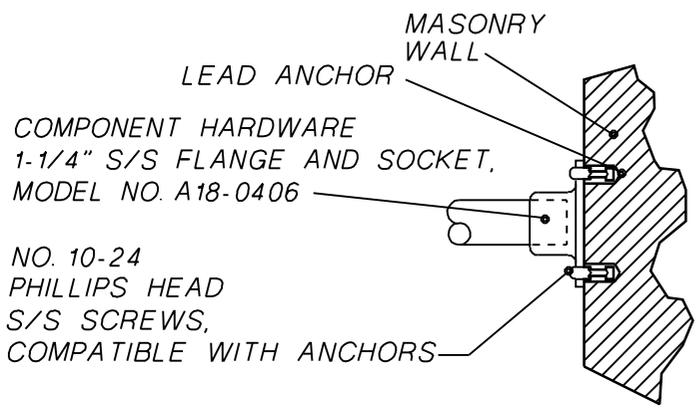


MASONRY WALL MOUNTED

C

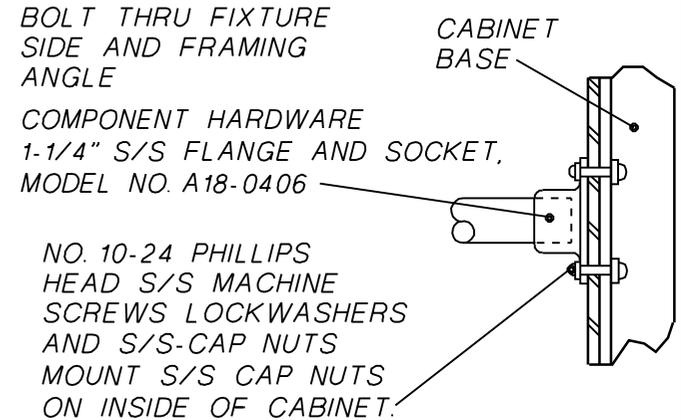

CABINET BASE MOUNTED

D

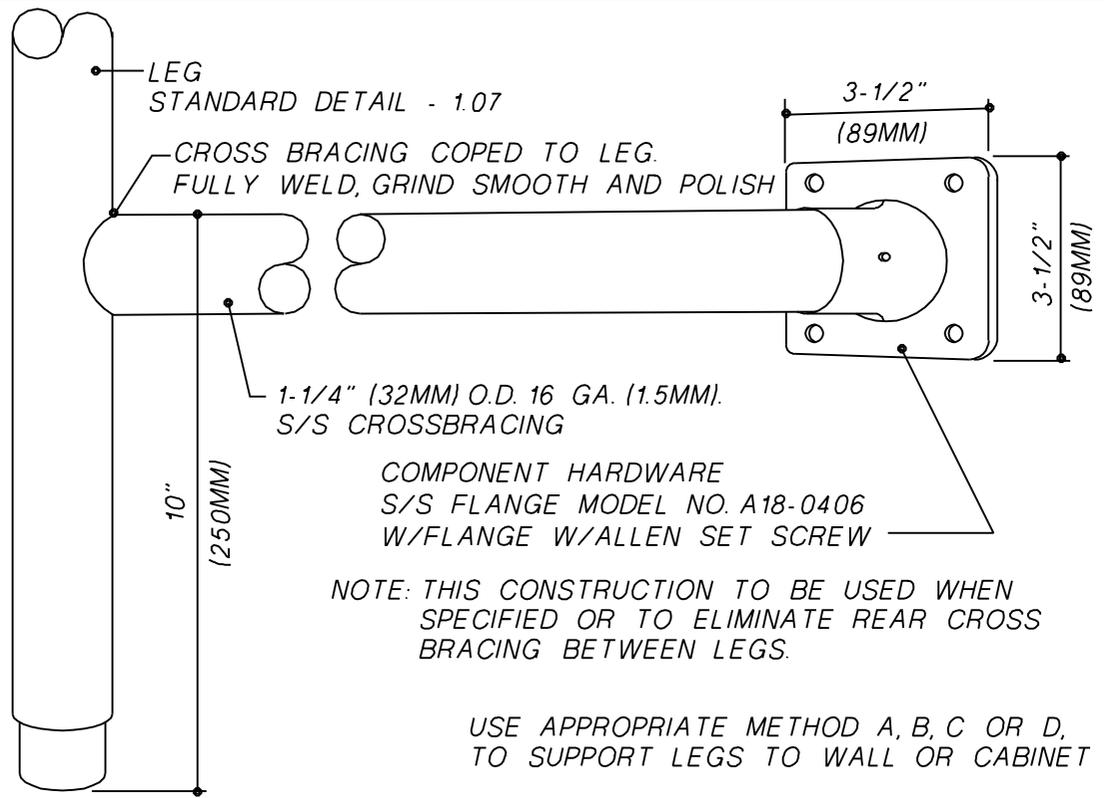

NOTE: THIS CONSTRUCTION TO BE USED WHEN SPECIFIED OR TO ELIMINATE REAR CROSS BRACING BETWEEN LEGS.

USE APPROPRIATE METHOD A, B, C OR D, TO SUPPORT LEGS TO WALL OR CABINET BASE.

APPROVED: 08-01-01