


GENERAL NOTES:

1. FOR ELECTRICAL SYMBOLS AND ABBREVIATIONS REFER TO DRAWING E.O.00.01
2. CABLE TRAY FOR VOICE/DATA WIRING ONLY. MOUNT BOTTOM OF TRAY 1'-0" ABOVE FINISHED CEILING.
3. PROVIDE SLEEVED OPENING FOR ALL TELEPHONE ROOM FLOOR PENETRATIONS. REFER TO DWG EB.20.40 FOR CONDUIT QTY AND SIZE AND DWG EB.10.47 DETAIL 2.

KEYNOTES:

- N001** MOUNT J-BOX IN THE CEILING SPACE.
- N002** CONNECT P.A. SPEAKERS TO AMPLIFIER 1-PA01 LOCATED IN TELEPHONE ROOM 1-3-109.
- N003** CONNECT P.A. SPEAKERS TO AMPLIFIER 1-PA02 LOCATED IN 1-1-23.

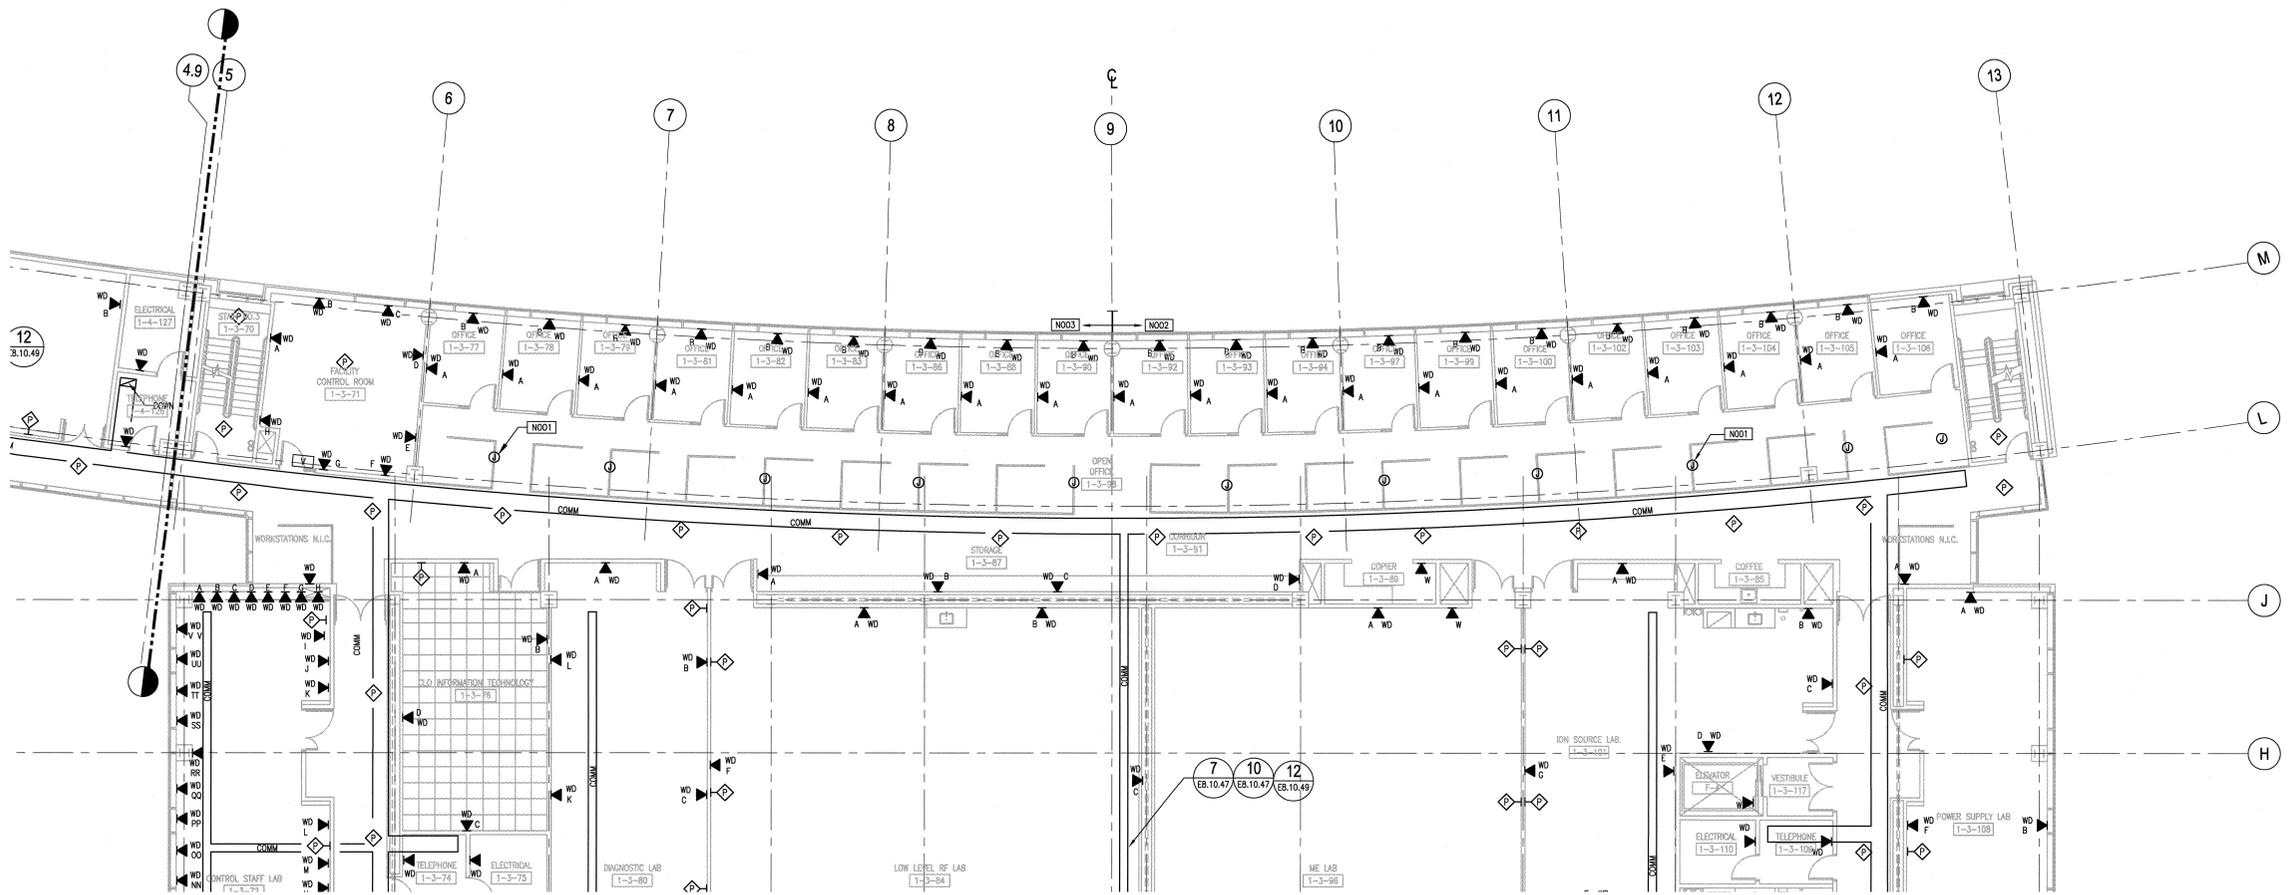

H

G

F

E

D

H

G

F

E

D