NEXT ASS'Y: FINAL ASS'Y:

## GENERAL NOTES:

1. FOR ELECTRICAL SYMBOLS AND ABBREVIATIONS REFER TO DRAWING E.0.00.01
2. CABLE TRAY FOR VOICE/DATA WIRING ONLY. MOUNT BOTTOM OF TRAY 1'-0" ABOVE FINISHED CEILING.
3. PROVIDE SLEEVED OPENING FOR ALL TELEPHONE ROOM FLOOR PENETRATIONS. REFER TO DWG E8.20.40 FOR CONDUIT QTY AND SIZE AND DWG E8.10.47 DETAIL 5.

## KEYNOTES:
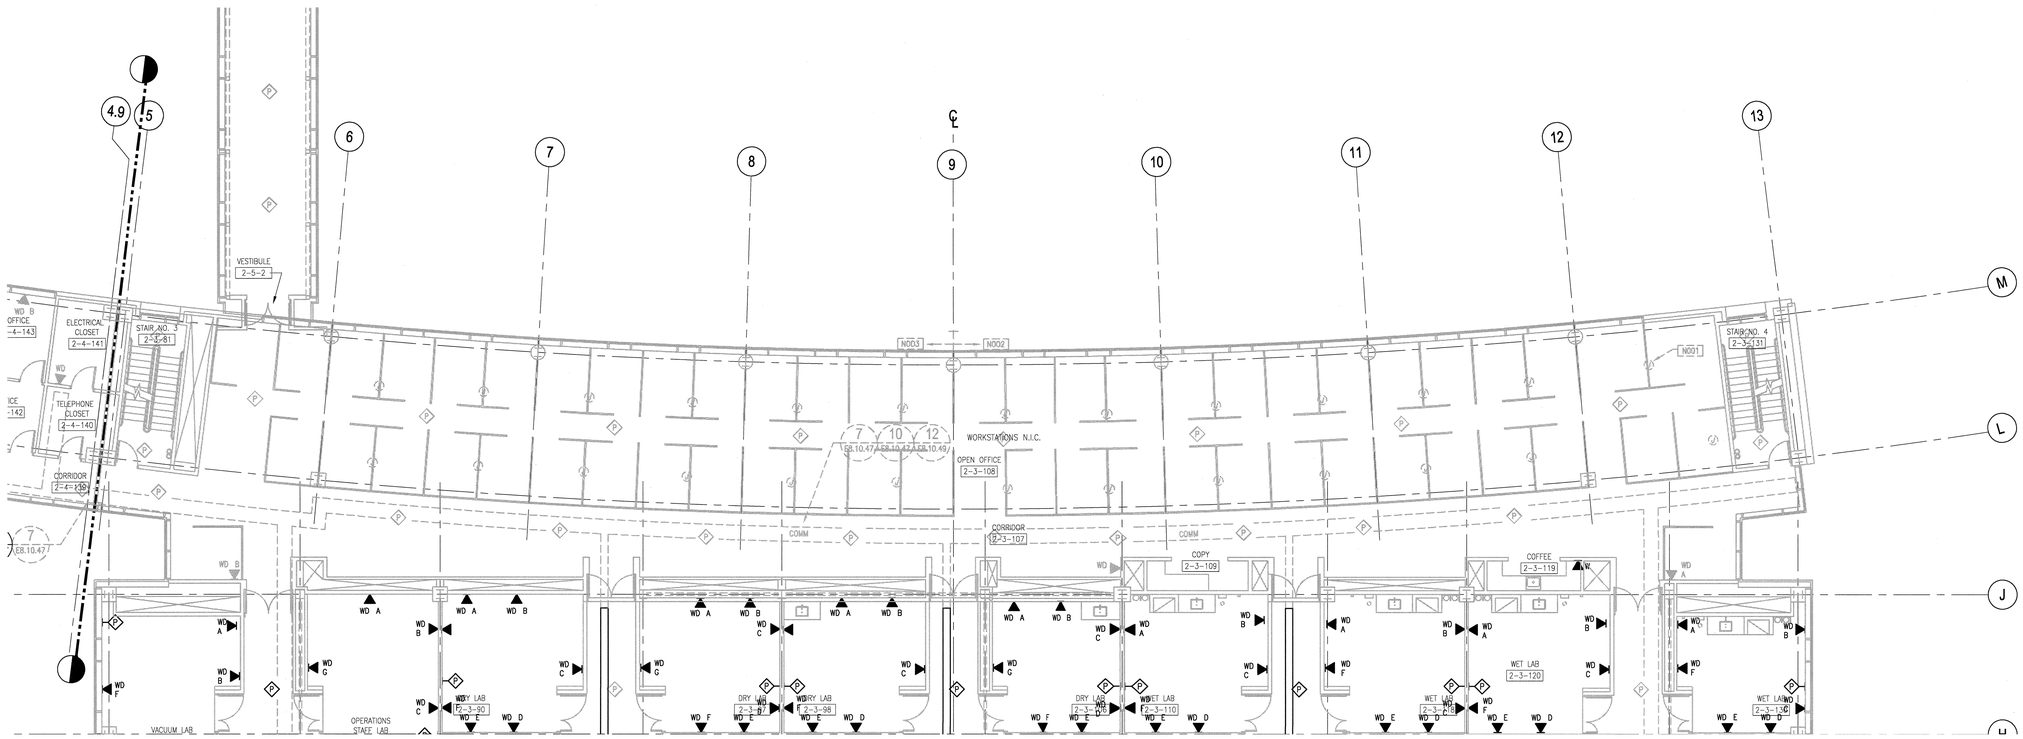
| | |
|---|---|
| N001 | MOUNT JUNCTION J-BOX IN THE CEILING SPACE BENEATH THE ABOVE FLOOR SLAB. CONNECT TO CABLE TRAY WITH 3/ 4" C.(TYP) |
| N002 | CONNECT P.A. SPEAKERS TO AMPLIFIER 2-PAA1 LOCATED IN TELEPHONE ROOM 2-3-122. |
| N003 | CONNECT P.A. SPEAKERS TO AMPLIFIER 2-PAA3 LOCATED IN TELEPHONE ROOM 2-4-140. |